


Tail tidy fitting guide




Remove rear seat using the key.



Remove screw A and panel A on both sides.

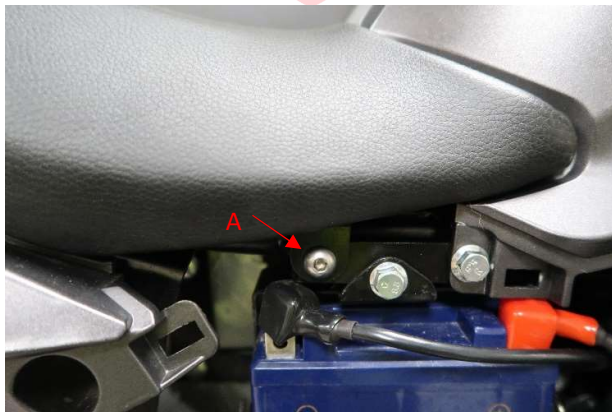

Remove screw A under the panel on both sides to lift the front seat.

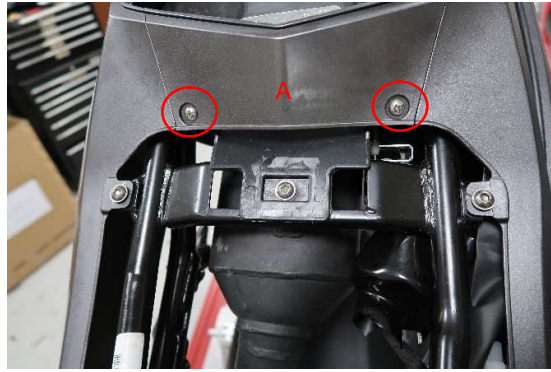

Removed both screws followed by the panel.



Remove all screws for the rear tail unit and remove the tail unit.



Remove the old tail unit along with all the lighting accessories.



Caution – when routing the wires, beware it does not touch the exhaust.

